


**PLANO DE ESTACIONAMIENTO Y ATRAQUE DE AERONAVES/
AIRCRAFT PARKING/DOCKING CHART**

ELEV AD 2224 M

7297 FT

TWR	118.55 ó 118.7	RMP	122.80
PDC	122.1	D-ATIS	127.650
SMC - N	121.85	FIS	126.875
SMC - S	121.0	EMERG	121.5
HELICOPTEROS MEX		118.15	

MEXICO
AEROPUERTO INTL/
INTL AIRPORT
BENITO JUAREZ

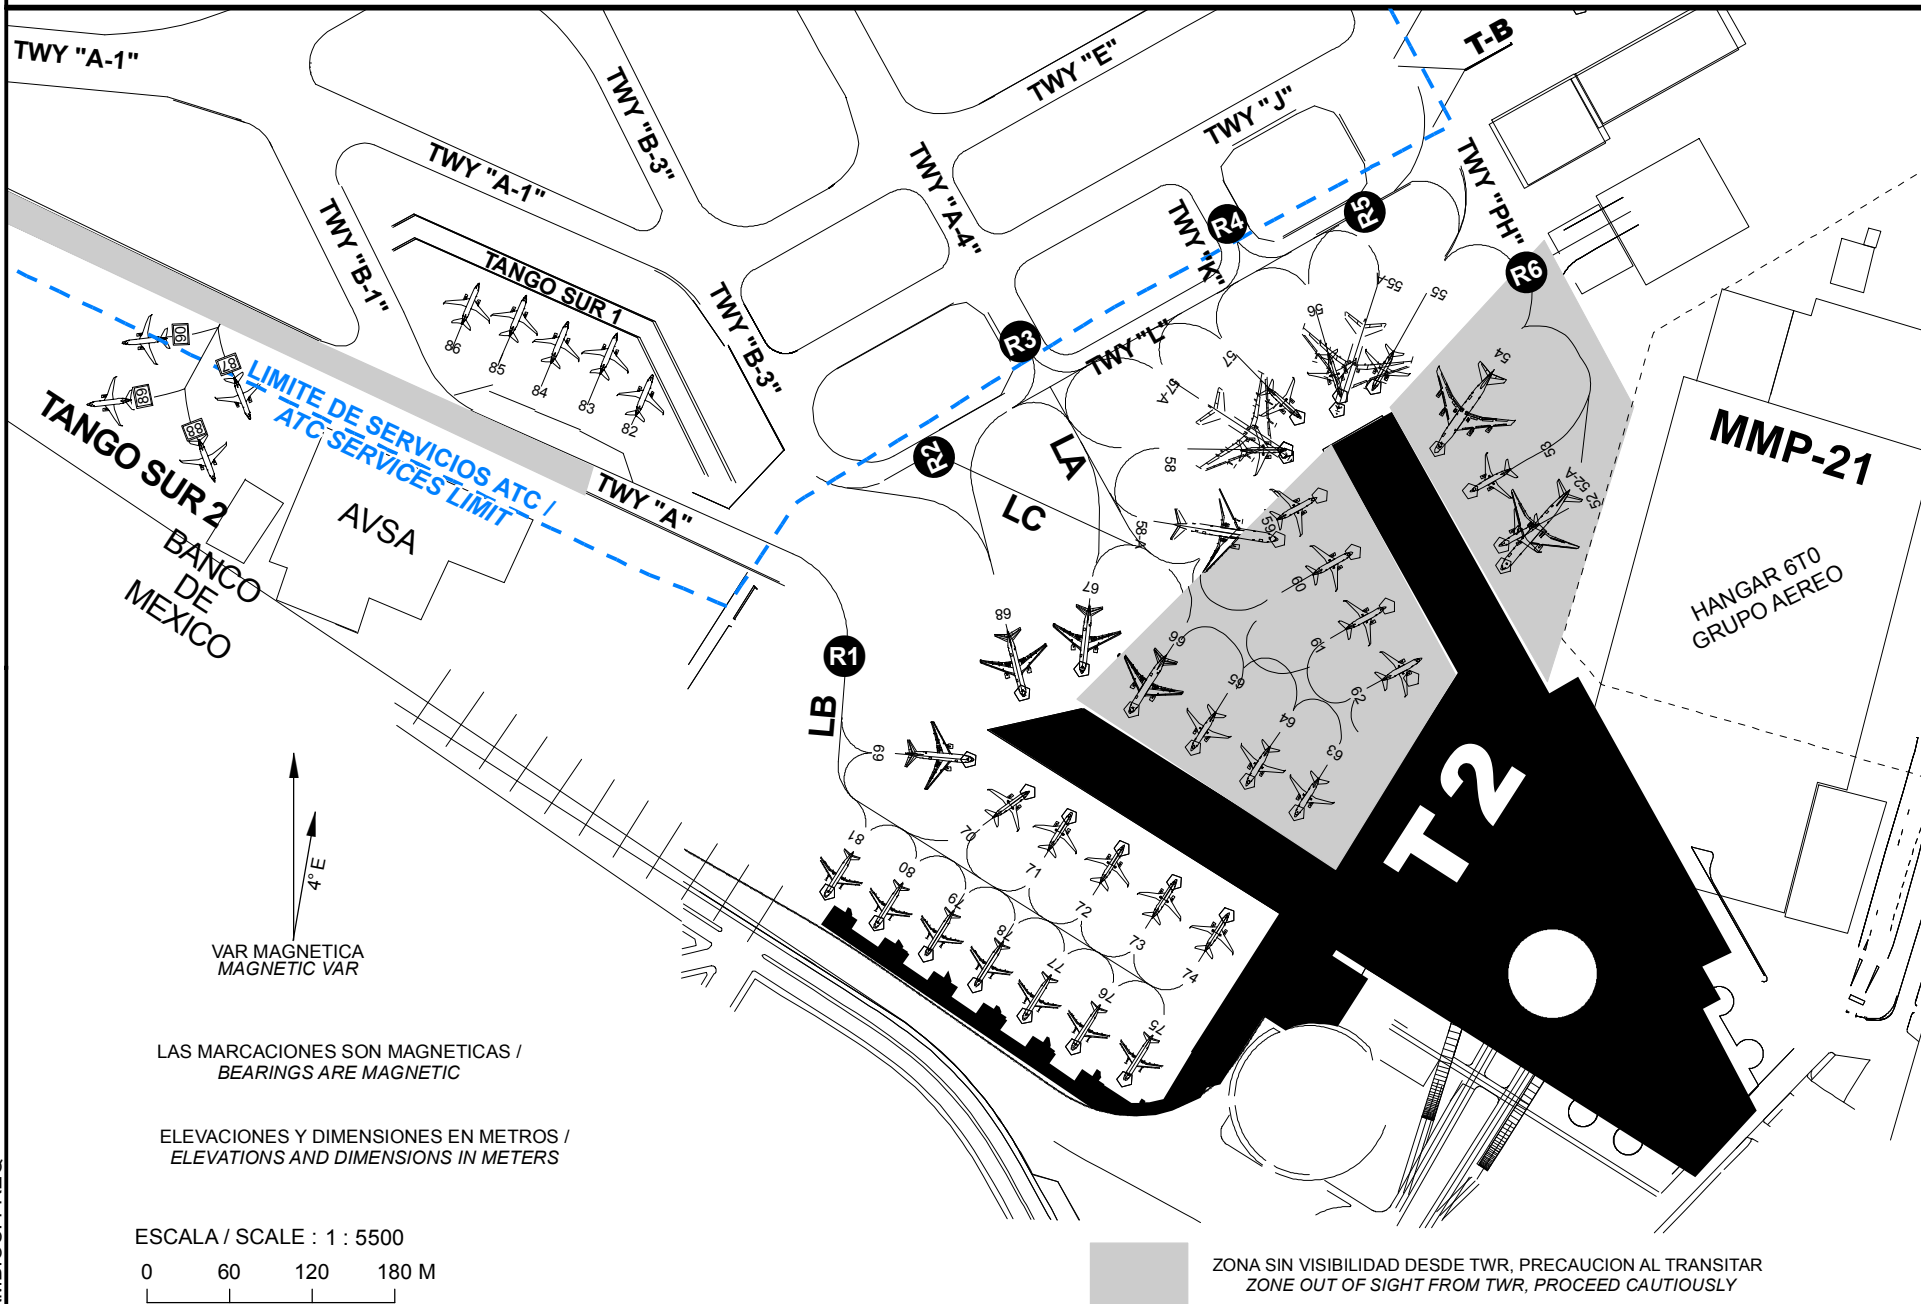

CAMBIO: FREC

POSICIONES PLATAFORMA TANGO SUR 1		
PUNTOS	LATITUD	LONGITUD
P-82	19° 25' 29.2041" N	99° 05' 00.3696" W
P-83	19° 25' 30.2303" N	99° 05' 01.3417" W
P-84	19° 25' 30.8187" N	99° 05' 02.7889" W
P-85	19° 25' 31.4120" N	99° 05' 04.2345" W
P-86	19° 25' 31.9783" N	99° 05' 05.6844" W

POSICIONES PLATAFORMA TANGO SUR 2		
PUNTOS	LATITUD	LONGITUD
P-87	19° 25' 28.37" N	99° 05' 10.01" W
P-88	19° 25' 26.94" N	99° 05' 10.95" W
P-89	19° 25' 28.70" N	99° 05' 14.01" W
P-90	19° 25' 30.05" N	99° 05' 13.25" W